


READ THIS FIRST

3 Easy Steps

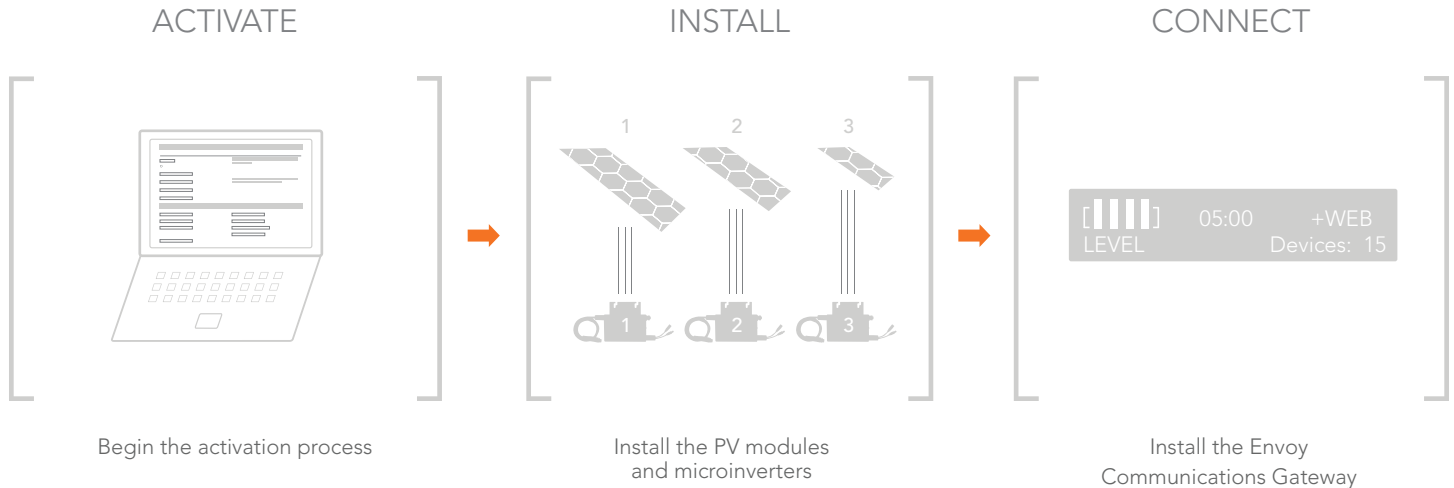

STEP 1

If You Are a First-Time Enphase Installer...

1. Fill out all fields on the form at: enlighten.enphaseenergy.com/register
2. An email message will be sent to you with your login credentials.
3. Log in and upload the array map for the system you are installing.

If You've Done Enphase Installations Before...

Use the login credentials already issued to the representative for your company.

1. Log in to enlighten.enphaseenergy.com/register. Click "Activations" and then "Add New System".
2. Fill out all fields on the form and upload your array map for the system you are installing.

If You Are Installing Your Own System...


1. Go to enlighten.enphaseenergy.com/register.
2. Click on the "Self-Installed" checkbox.
3. Complete and submit the form.
4. Email your array map to support@enphaseenergy.com
5. An email message will be sent to you with your login credentials.

STEP 2

Install the PV modules and microinverters.

Turn page for step 3 ▶

STEP 3

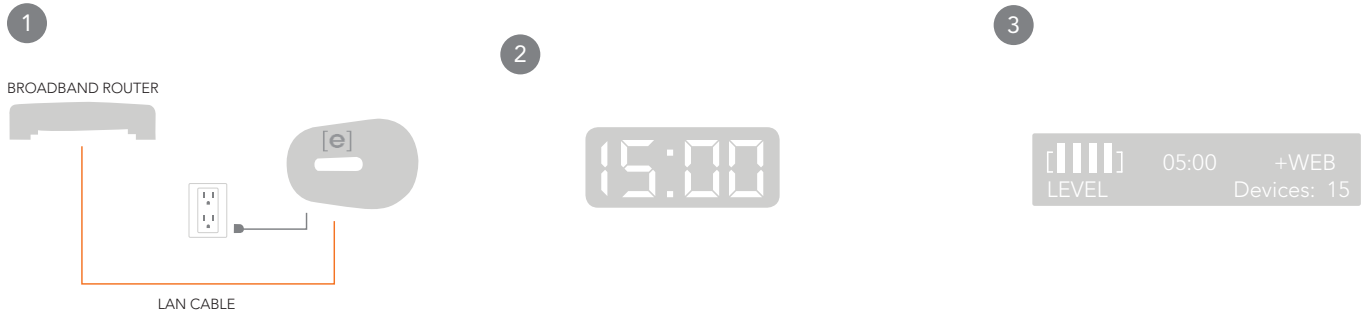

- Connect the Ethernet network cable to the premises' broadband router.
- Plug the Envoy unit into a dedicated wall outlet (not in a power strip).
- Wait 15 minutes to allow the Envoy to perform a scan of all the microinverters in your array.
- If the Envoy display indicates the correct number of devices (microinverters) detected, and at least two level bars are showing, the Envoy location is good.
- Otherwise, the Envoy may need to be relocated. Refer to the Troubleshooting section below for more details.

TROUBLESHOOTING

If...

You see -WEB instead of +WEB

Then...

Reboot the Envoy (i.e. turn it off and then on again) and wait for at least 15 minutes.

You have zero or one bars for level

Relocate the Envoy to the power outlet closest to the load center (and contact Enphase within 3 business days to receive a free pair of Ethernet bridges to connect the Envoy back to the internet router).

The number of devices shown is less than the number of microinverters installed

If the number of bars is zero or one, relocate the Envoy to the power outlet closest to the load center (and contact Enphase within 3 business days to receive a free pair of Ethernet bridges to connect the Envoy back to the internet router).

If the number of bars is more than two, please contact Enphase for further troubleshooting assistance.